

Congratulations on buying an Ergonomic Hardwood Platform Bed.

Your Hardwood Bed Frame with Euro Slats comes in 3 boxes:

- 1) Head and Foot rails, Bolts and Allen Wrench Side Rails, center rail, center support leg
- 2) Drop-in European Slat Sections (3)
- 3) Drop-in European Slat Sections (3)

Lay out rails.

- Start by laying out Head and Foot rails in their approximate final location. Each is marked with "H" for head or "F" for foot.
- Lay out the center with end marked "H" toward the head.
- Lay out the side rails (slat ledge facing inward) with end marked "H" toward the head.

Setting Rails

Standing the Head Rail up with one hand, place hooks at end of Side Rail into plate in corner post of Head Rail. Repeat with other Side Rail.

Go to Foot Rail and repeat. After last corner, press hard on ends of both side rails to seat fasteners.




Install Center Rail

Attach center rail similar to side rails. Attach head side and push out the foot board to set the hook into place.



Attach Leg

The center rail leg (found in bag with blue tensioners in the box marked slats) Attach with the two threaded bolts using hex wrench found with leg.

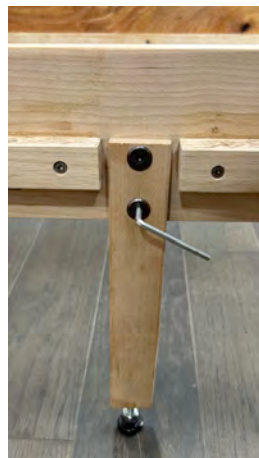


Adjust Center Leg Leveler

The center leg has threaded feet. Turn them until they press against the floor.



Install Euro Slat Sections

Lay Each section according to their labeling (shown is marked Head Left) and bolt into frame with included Allen Wrench.

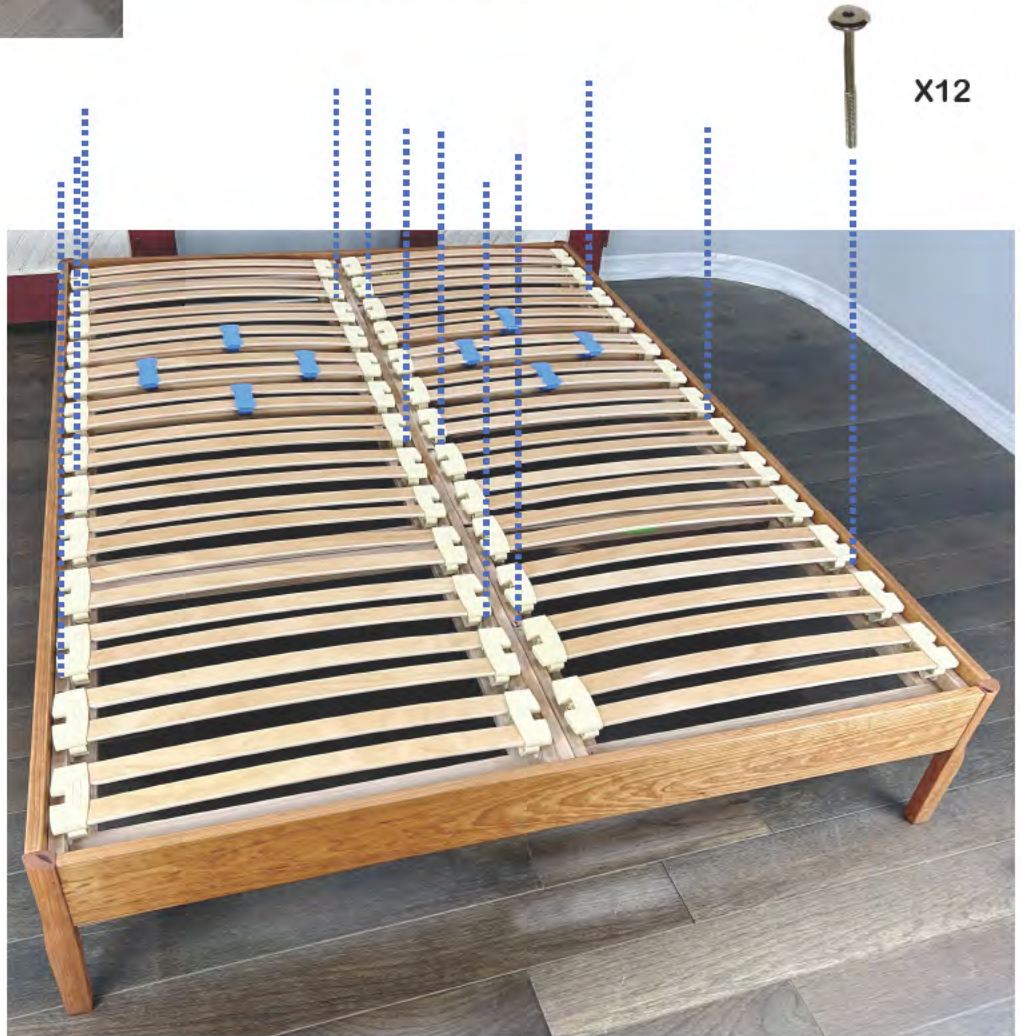

Setup your FloBed on top, and enjoy! ✨💙