

# Prodigy™ CE

## owners manual

■ R-142



[LPAdjustableBases.com](http://LPAdjustableBases.com)

Adjustable Bases by  
**leggett & platt®**  
finely crafted tranquility™



## CONTENTS

Advisory .....	4
Assembly .....	6
Remote Control Function .....	10
Remote Control Programming .....	11
Power Down Operation .....	14
Troubleshooting .....	16
Accessories .....	17
1-3-25 Warranty .....	18



### **READ ALL INSTRUCTIONS BEFORE USING**

If adjustable base does not operate or if parts are missing, call:  
1-800-888-3078

## ADVISORY

### IMPORTANT INFORMATION

#### READ THE FOLLOWING INFORMATION CAREFULLY BEFORE USING THIS PRODUCT



#### WARNING

FOR OPTIMUM ADJUSTABLE BASE OPERATION, USE A GROUNDED, ELECTRICAL SURGE PROTECTION DEVICE (NOT INCLUDED). FAILURE TO USE A SURGE PROTECTION DEVICE COULD COMPROMISE SAFETY OR CAUSE PRODUCT MALFUNCTION.

#### ELECTRICAL RATING

Electrical components are rated for 100-240V, 50-60Hz, 1.5A.

#### ELECTRICAL GROUNDING

This product is equipped with a polarized or grounded electrical power cord. The power cord will only fit into a grounded, electrical surge protection device (not included) or a grounded electrical outlet.

#### WARRANTY WARNING

Do not open any control boxes, motors or remote control devices (with the exception of the remote control and power down box battery compartments). The product warranty will be void if these components are tampered with. Do not attempt to alter component wiring or adjust or modify the structure of the product in any way or the warranty will be void. Any repair or replacement of base parts must be performed by authorized personnel.

#### LUBRICATION

This product is designed to be maintenance free. The lift motors are permanently lubricated and sealed—no additional lubrication is required. Do not apply lubricant to lift motor lead screws or any nylon nuts or the base may inadvertently creep downward from the elevated position.

#### SMALL CHILDREN / PETS WARNING

After the base is unboxed, immediately dispose of packaging material as it can smother small children and pets. To avoid injury, children or pets should not be allowed to play under or on the base. Children should not operate this base without adult supervision.

#### MESSAGE OPERATION

The massage feature will emit a minimal tone during operation. This is normal. When the massage level is increased, motor resonance will intensify accordingly.

#### LOCATION ENVIRONMENT

The level of sound experienced during operation is directly related to the location environment. For example, when a base is located on a hardwood floor with the massage feature in operation, a vibrating tone will be audible.

#### PRODUCT RATINGS

The base lift motors are *not* designed for continuous use. Reliable operation and full life expectancy will be realized as long as the lift motors do not operate any more than five (5) minutes over a forty-five (45) minute period, or approximately 11% duty cycle.

**Note: Massage equipped bases are not designed for continuous, extended massage operation. Massage systems are rated for a maximum of 2 hours of use within any 6 hour period.** Any attempt to circumvent or exceed product ratings will shorten the life expectancy of the product and may void the warranty.

The recommended maximum weight (including mattress) is 700 lb (317 kg) distributed evenly across the base. This product is not designed to support or lift this amount in the head or foot sections alone. **Note: Exceeding the recommended weight restrictions could damage the mattress and void the warranty.**

For best performance, consumers should enter and exit the adjustable base with the base in the flat (horizontal) position. Avoid placing entire weight on head or foot section of the base, including when in the raised position. **DO NOT STAND ON BASE AT ANY TIME.**

UL (Underwriters Laboratories) recognized components.

CFR 1633 approved for use with most mattresses.  
Assembled in USA

## ADVISORY

### IMPORTANT INFORMATION

#### READ THE FOLLOWING INFORMATION CAREFULLY BEFORE USING THIS PRODUCT

##### HOSPITAL USE DISCLAIMER

***This base is designed for in-home use only.*** It is not approved for hospital use and does not comply with hospital standards. Do not use this base with tent type oxygen therapy equipment, or use near explosive gases. Manufacturer makes no representation or warranty that the adjustable base constitutes a medical device or is suitable for medical or therapeutic use.

##### SERVICE REQUIREMENTS

Service technicians are not responsible for moving furniture, removing headboards and footboards or any items required to perform maintenance on the base. In the event the technician is unable to perform service due to lack of accessibility, the service call will be billed to the purchaser and the service will have to be rescheduled.

##### LIFTING/LOWERING MECHANISMS

The lift/lower feature will emit a minimal humming sound during operation. This is normal.

During operation, the lift arm wheels make contact with the platform support of the base. This applies slight tension on the moving components and resonance is reduced to a minimum level. If excessive noise or vibration is experienced, reverse the movement action (up or down) of the base with the remote control. This should realign the base's activating mechanisms to the proper operational position.

##### FABRIC CLEANING INFORMATION

Spot clean only with water based shampoo or foam upholstery cleaner. Pretest a small, inconspicuous area before proceeding. Do not over wet. Do not use solvents to spot clean. Pile fabrics may require brushing with a non-metallic, stiff bristle brush to restore appearance. ***Hot water extraction or steam cleaning is not a recommended cleaning method.***

To prevent overall soiling, frequent vacuuming or light brushing with a non-metallic stiff bristle brush to remove dust and grime is recommended. When cleaning a spill, blot immediately to remove spilled material. Clean spots or stains from the outside to the middle of the affected area to prevent circling. Use a professional furniture cleaning service when an overall soiled condition is apparent.

##### PACEMAKER WARNING

This product produces a vibrating sensation. It is possible that individuals with heart-assist pacemakers may experience a sensation similar to exercise. Consult physician for complete information.

##### FCC COMPLIANCE

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning off the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radio Frequency = 2.4 GHz.

## ASSEMBLY

To assemble adjustable base, complete the following procedure:

### STEP 1

Open the base shipping carton and verify the following items are included:

- (4) Bed Legs
- (1) Remote Control w/ (3) AAA batteries
- (1) Remote Control Holder
- (1) Power Supply (includes power brick, electrical feed cord, and electrical power cord)
- (1) Dual Sync Cable (split sizes only)
- (2) USB Charging Stations (factory attached at head end of base for most sizes; included in hardware box with self-adhesive buttons for Split Queen sizes)
- (1) Mattress Retainer
- (1) Owners Manual
- (1) Warranty Activation Card
- (1) Quick Setup Guide



**WARRANTY  
ACTIVATION CARD**



**OWNERS MANUAL**



**QUICK SETUP GUIDE**




**REMOTE CONTROL HOLDER**  
(shown with remote control)



**REMOTE CONTROL**  
w/ 3 AAA batteries



**4 - LEGS**

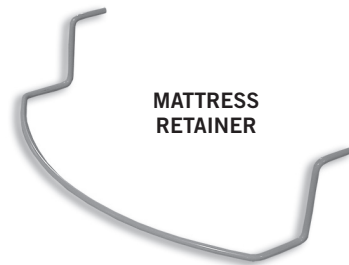

**MATTRESS  
RETAINER**



**2 - USB CHARGING STATIONS**  
*factory attached to base*  
(Split Queen sizes receive in hardware box  
with self-adhesive buttons)



**POWER SUPPLY** (power brick, electrical feed  
cord, and electrical power cord)  
*factory attached to base, no assembly  
required*



**DUAL SYNC CABLE**  
(split sizes only)


## ASSEMBLY

### STEP 2

Extend the main power cord out head end of base. Set the hardware box aside. Cut the zip-tie and remove the mattress retainer.

### STEP 3


Screw the legs into the tapped holes at the (4) corners (FIGURE 1).

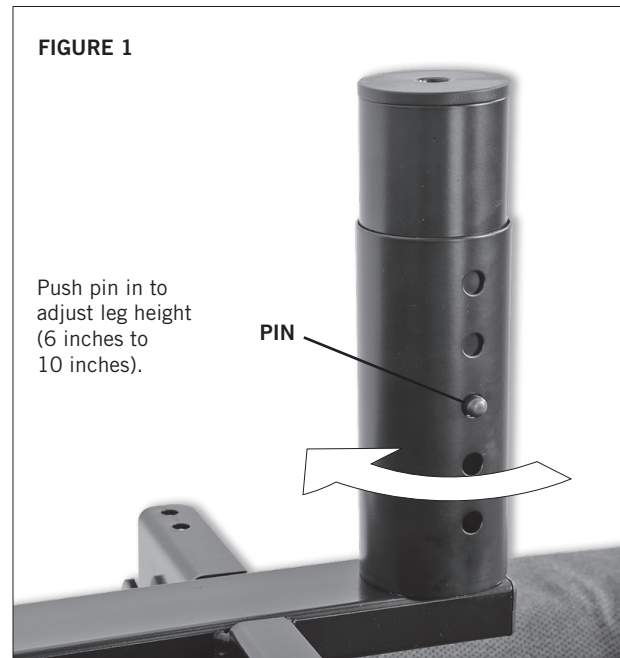

### STEP 4

Rotate the base in the bottom shipping carton onto its edge, and then rotate the base over onto its legs.

Note the USB charging stations at head end of base (FIGURE 2).

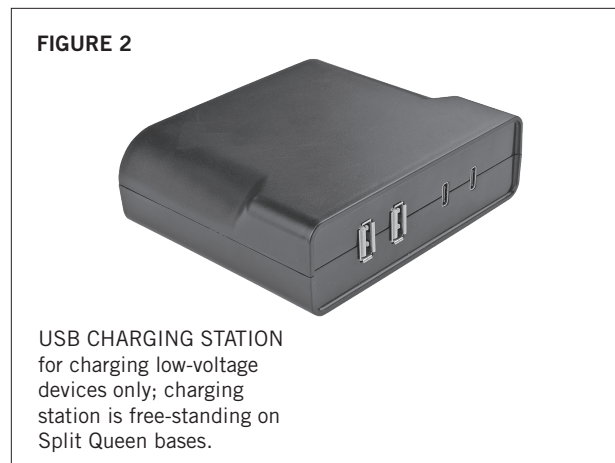

### WARNING

POWER CORDS MUST NOT INTERFERE WITH ANY ADJUSTABLE BASE MECHANISMS. DO NOT WEAVE CORDS THROUGH BASE STRUCTURE.



### CAUTION

DO NOT ATTEMPT TO SCREW LEGS INTO ANY OTHER INSERTS. THIS WILL DAMAGE PRODUCT.



### WARNING

DUE TO RISK OF INJURY, TWO ADULTS ARE REQUIRED TO HANDLE AND MOVE ADJUSTABLE BASE.



### WARNING

REMOVE CHARGING CORDS FROM USB CHARGING STATION BEFORE ENTERING OR EXITING BASE.

## ASSEMBLY

### STEP 5

Remove remaining packaging and any protective film.


### STEP 6

Plug the base into an electrical power source. **Note: An electrical surge protection device is recommended, but not included.**

### STEP 7

Install 3-AAA batteries in the remote control (FIGURE 3).

Operate remote control to verify base functions properly. If base does not operate, see the Troubleshooting section.

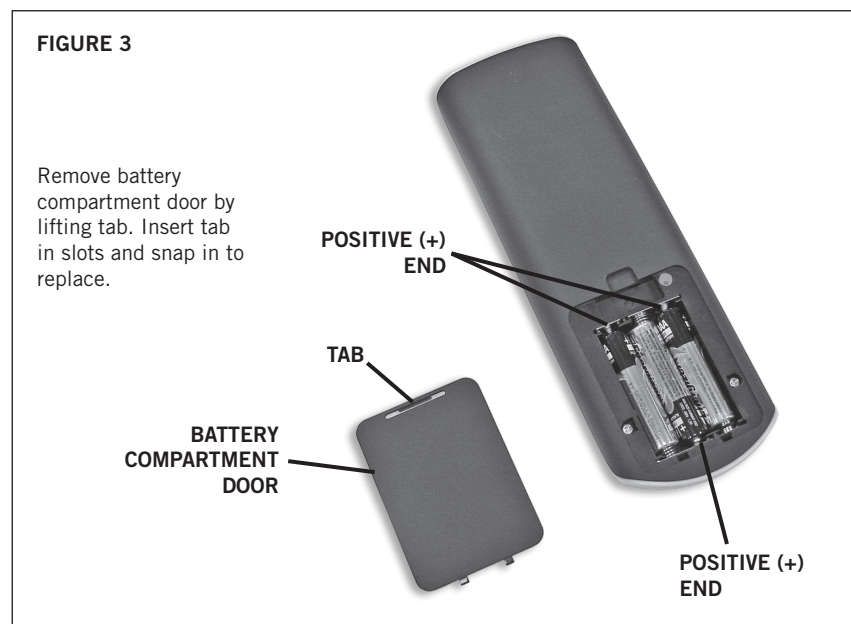

### STEP 8

Lower base to flat position.




## ASSEMBLY

### MATTRESS RETAINER INSTALLATION (OPTIONAL)


Base is equipped with a Micro-Hook™ system to captivate the mattress as shown in FIGURE 4, but a mattress retainer can also be used.

**Important: If using a dust ruffle or mattress encasement with this product, a mattress retainer must be used.**

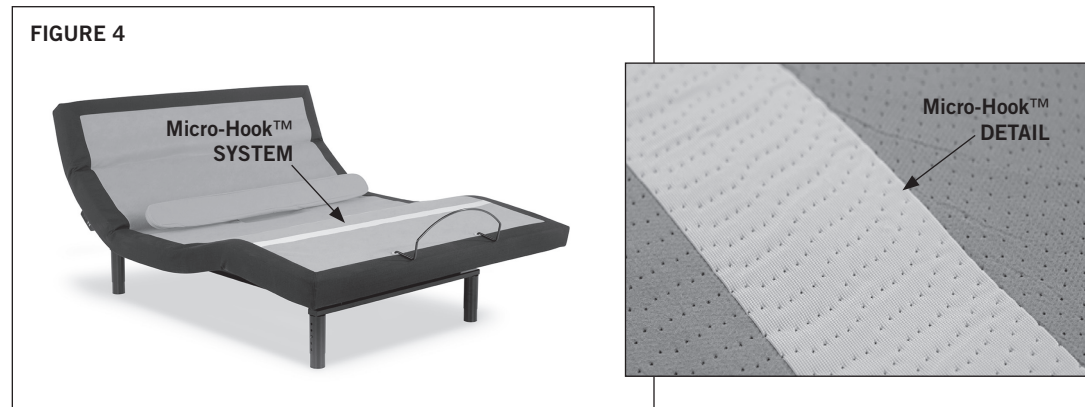

### STEP 9

Install the mattress retainer by placing the mattress retainer ends in the holes at the foot end of the base. Make sure horizontal bar section is flush against the base (FIGURE 5).

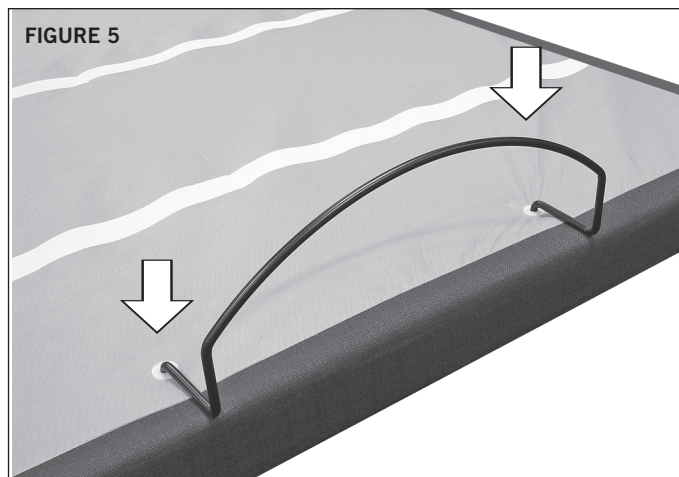

### STEP 10

Place mattress on base to complete assembly.

## REMOTE CONTROL FUNCTION

### SNORE BUTTON

Touch and hold to raise head to the preprogrammed position. Head will automatically lower to flat after 15 minutes.

\*To program a position, adjust base to desired position, touch and hold the *set button* until the massage motors and underbed light turn on and off, then touch and hold the *Snore button* until the massage motors turn on and off.

### SET BUTTON

Touch and hold to program M1, M2 and Snore presets.

### HEAD UP BUTTON

Touch and hold to raise the head section.

### PILLOW UP BUTTON

Touch and hold to raise the pillow section.

### LUMBAR UP BUTTON

Touch and hold to raise the lumbar section.

### FOOT UP BUTTON

Touch and hold to raise the foot section.

### M1 BUTTON

Touch and hold to adjust base to the programmed position.

\*To program a position, adjust base to desired position, touch and hold the *set button* until the massage motors and underbed light turn on and off, then touch and hold the *M1 button* until the massage motors turn on and off.

### HEAD MESSAGE UP/DOWN BUTTON

Touch to increase or decrease massage intensity. Massage has 3 speeds: Low, medium and high. Massage will automatically shut off after 15 minutes.

### MESSAGE ON/OFF BUTTON

Touch "on" to turn both massage motors on. Touch "off" to turn both massage motors off.

### UNDERBED LIGHT BUTTON

Touch to turn underbed light on. Touch again to turn underbed light off.

### LOCK BUTTON

Touch and hold for 5 seconds to lock/unlock the remote control. The backlight flashes, confirming the change.

### HEAD DOWN BUTTON

Touch and hold to lower the head section.

### PILLOW DOWN BUTTON

Touch and hold to lower the pillow section.

### LUMBAR DOWN BUTTON

Touch and hold to lower the lumbar section.

### FOOT DOWN BUTTON

Touch and hold to lower the foot section.

### M2 BUTTON

Touch and hold to adjust base to the programmed position.


\*To program a position, adjust base to desired position, touch and hold the *set button* until the massage motors and underbed light turn on and off, then touch and hold the *M2 button* until the massage motors turn on and off.

### FOOT MESSAGE UP/DOWN BUTTON

Touch to increase or decrease massage intensity. Massage has 3 speeds: Low, medium and high. Massage will automatically shut off after 15 minutes.

### FLAT BUTTON

Touch and hold to lower the base to the level position.

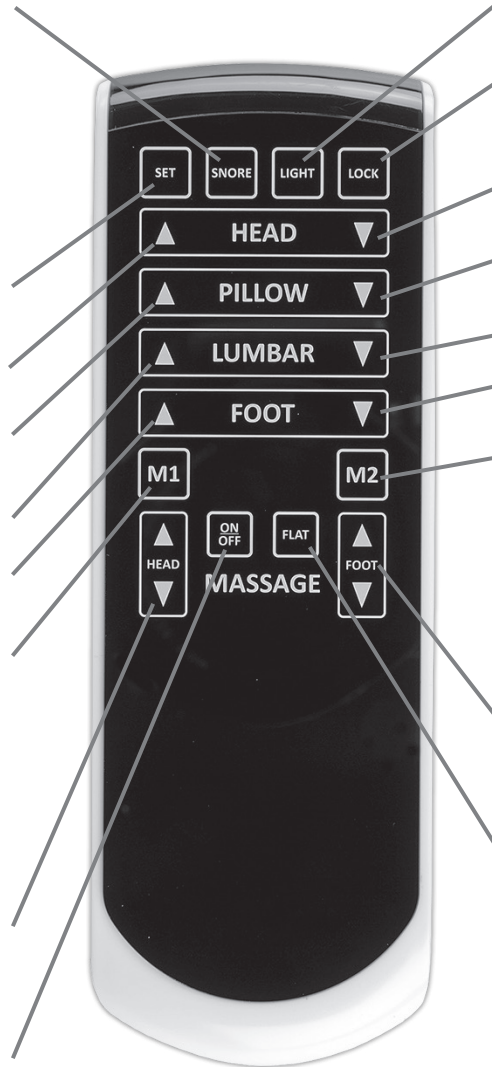

## NOTE

REMOTE CONTROL REQUIRES (3) AAA SIZE BATTERIES (INCLUDED).  
WHEN TOUCHED, THE ACTIVATED BUTTON ON REMOTE CONTROL TURNS BLUE.

### TOUCH & HOLD TO ONE TOUCH

**Note:** If using 2 remotes to operate 1 or more bases, both remotes must be set to the same "touch & hold" or "one touch" mode.

To change remote control functions from "touch and hold" to "one touch" ("one touch" = touch and release), simultaneously touch the **HEAD MESSAGE DOWN** and **FOOT MESSAGE DOWN** buttons for 5 seconds. The massage motor and underbed light will turn on and off confirming the change. Your base is now set to "one touch."

When in "one touch" mode:

#### M1, M2, and Snore buttons

Touch and release (one touch) button. Base will adjust to the programmed position. Touch any other button to stop the base during movement.

#### Flat button


Touch and release (one touch) button. Base will shut off massage motor, if active, and adjust base to level position. Touch any other button to stop the base during movement.

To revert back to **factory settings**, simultaneously touch and hold the **SET** button and the **FLAT** button for 5 seconds. The massage motor will turn on and off confirming the change. Your base is now set to factory settings. **Note: M1, M2, and Snore positions will revert to factory preprogrammed positions.**

## REMOTE CONTROL PROGRAMMING - 1 REMOTE TO OPERATE 1 BASE


### STEP 1

Unplug base for 3 minutes, then plug back in. The underbed light turns on. Base is now in pairing mode.

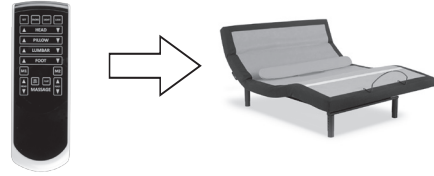

### STEP 2

Remove the battery compartment door from the remote control (FIGURE 6).

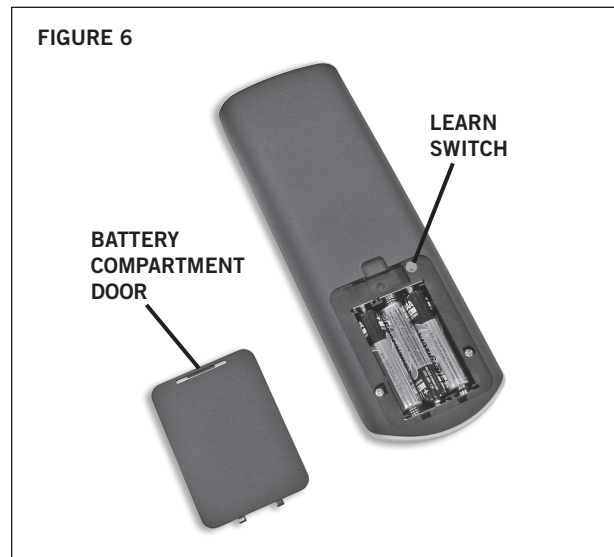

### STEP 3

Using a pointed object, press and hold the LEARN SWITCH on the remote control (FIGURE 6) until the underbed light goes off.

### STEP 4

Operate the remote control to verify the base functions correctly.

## REMOTE CONTROL PROGRAMMING - 1 OR 2 REMOTES TO OPERATE 2 BASES

**Note:** Make sure both remotes are in “touch & hold” mode and both bases are flat before beginning procedure. If using 2 remotes, both remotes must be in the same “touch & hold” or “touch & release” mode.

### STEP 1

Plug both bases into power source. Operate each base with its respective remote control to verify the base functions properly.

Lower both bases to the flat position.

### STEP 2

UNPLUG both bases.


### STEP 3

Place both bases on their sides close to each other.

**CAUTION: DUE TO RISK OF INJURY, TWO ADULTS ARE REQUIRED TO HANDLE AND MOVE ADJUSTABLE BASE.**



### STEP 4

Locate the dual sync cable (FIGURE 7).

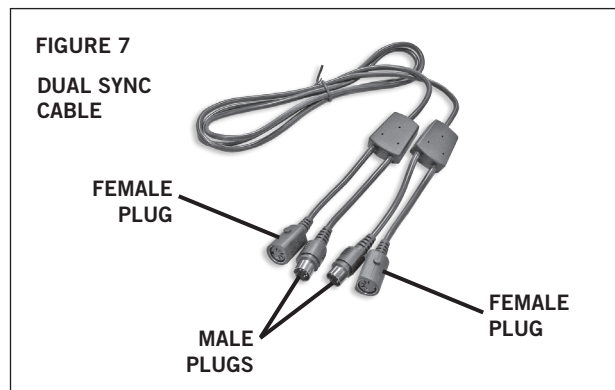


### STEP 5

On BASE 1, unplug the existing cable from the MFP port on the control box (FIGURE 8).

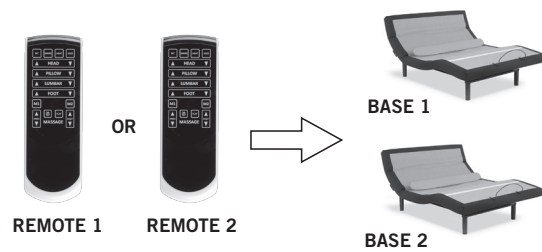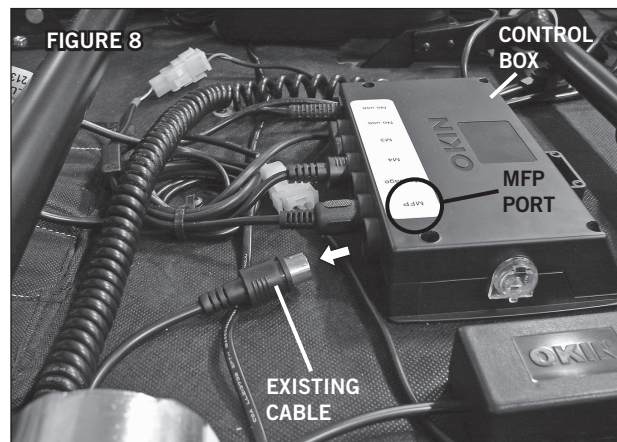

### STEP 6

Insert one male plug of the dual sync cable into the MFP port (FIGURE 9). Insert the removed cable into the corresponding female plug of the dual sync cable (FIGURE 9).

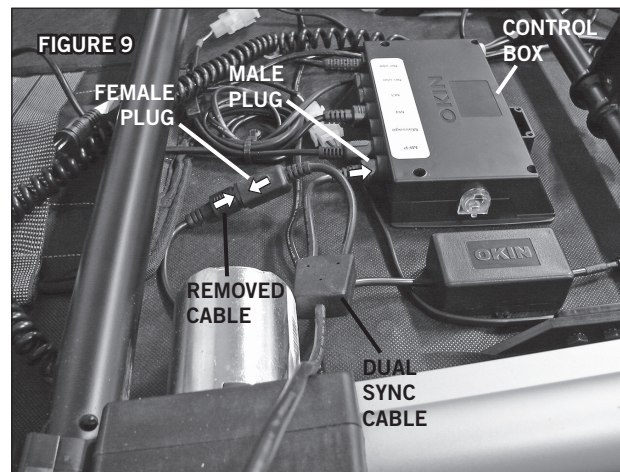

### STEP 7

Repeat Steps 5 and 6 with BASE 2, using the remaining male and female plugs of the dual sync cable.

### STEP 8

Turn both bases over onto their legs.

**CAUTION: MAKE SURE SYNC CABLE IS NOT CAUGHT IN BASE OR PINCH POINTS.**

### STEP 9

Plug both bases back into power source.

### STEP 10

Operate the remote control(s) to verify both bases function correctly. If using only one remote control to operate both bases, store the second remote for use as a spare.

**Note:** If bases do not operate in unison, make sure dual sync cable is fully inserted into ports in control box. Unplug both bases for 10 seconds, then plug back in.



## REMOTE CONTROL PROGRAMMING - SEPARATING 2 BASES (independent movement)

### STEP 1

UNPLUG both bases.

### STEP 2

Place both bases on their sides close to each other.




**CAUTION: DUE TO RISK OF INJURY, TWO ADULTS ARE REQUIRED TO HANDLE AND MOVE ADJUSTABLE BASE.**

### STEP 3

On both bases, remove the male plug of the dual sync cable from the MFP port on the control box (FIGURE 10).

### STEP 4

On both bases, remove the cable inserted into the female plug of the dual sync cable and insert it into the MFP port on the control box (FIGURES 10 and 11).

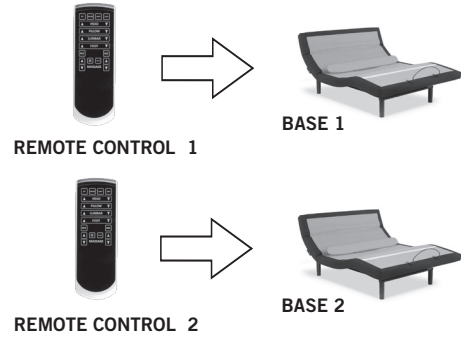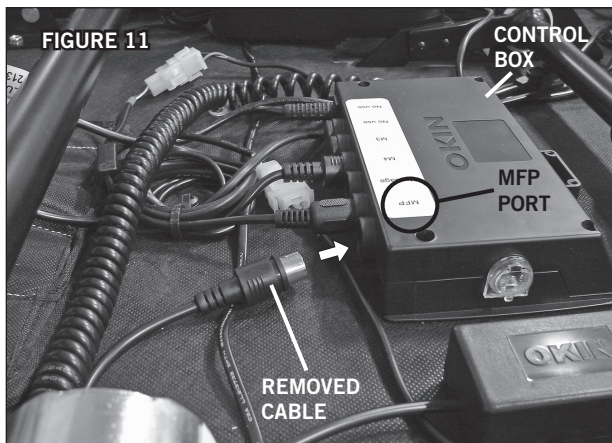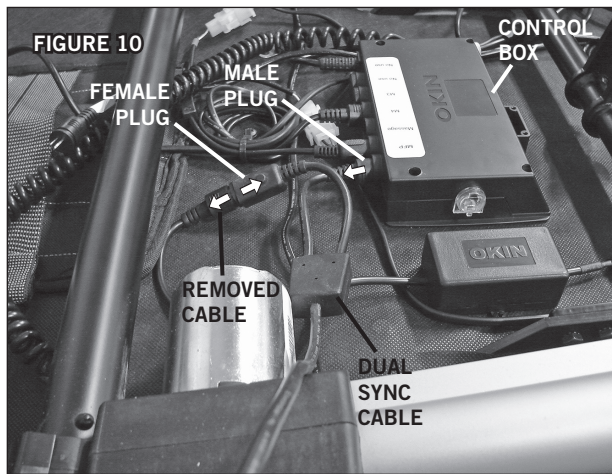

### STEP 5

Turn both bases over onto their legs.

**CAUTION: DUE TO RISK OF INJURY, TWO ADULTS ARE REQUIRED TO HANDLE AND MOVE ADJUSTABLE BASE.**

### STEP 6

Plug both bases back into power source.

Remote control 1 should now operate base 1 and remote control 2 should now operate base 2. If they do not, refer to **Remote Control Programming - 1 Remote to Operate 1 Base.**

## POWER DOWN OPERATION

Use this procedure to lower the base to flat during a power outage. Do NOT put batteries in power down device until necessary for use.


**Note: Power down device uses 9-volt alkaline batteries, which are not included.**

### STEP 1

Unplug base from electrical power supply.


### STEP 2

Insert (2) 9-volt alkaline batteries into the power brick (FIGURE 12).

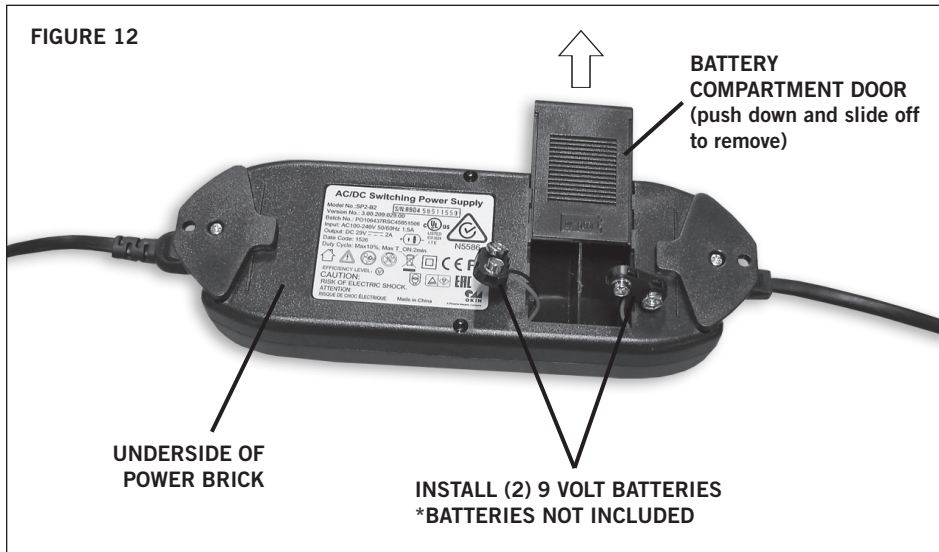

### STEP 3

Press the HEAD DOWN BUTTON on the remote control until the head section is flat. Press the PILLOW DOWN BUTTON on the remote control until the pillow section is flat. Press the LUMBAR DOWN BUTTON on the remote control until the lumbar section is flat. Press the FOOT DOWN BUTTON on the remote control until the foot section is flat (FIGURE 13).

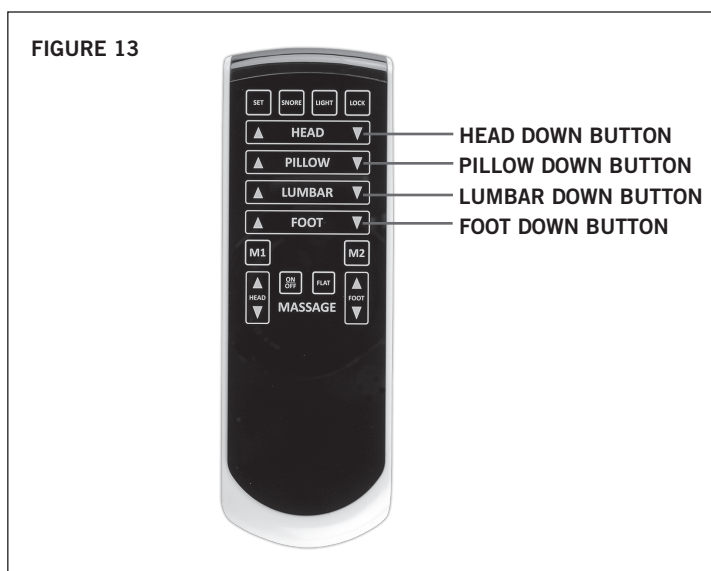

## POWER DOWN OPERATION

### STEP 4


Remove batteries from power down device and discard.

**Note: Batteries are good for only one use.**

### STEP 5

Plug base into electrical power source (FIGURE 15).

When power is restored from outage, base is ready to resume normal operation.

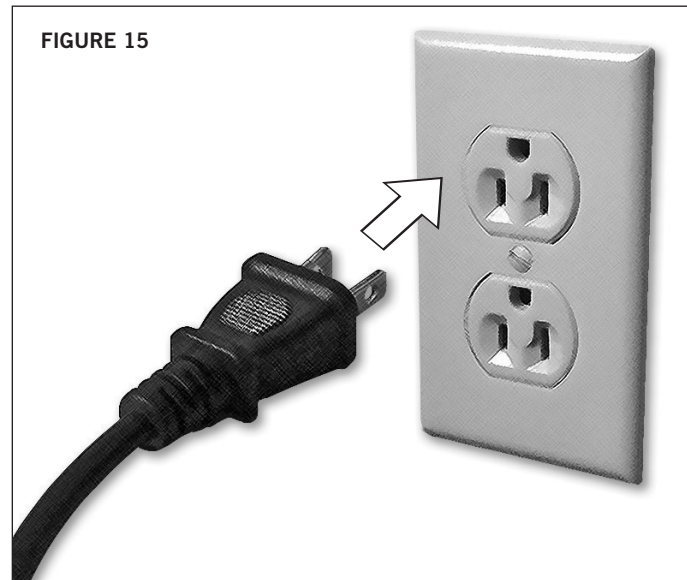

## TROUBLESHOOTING

If the adjustable base fails to operate, investigate the symptoms and possible solutions provided in the chart below:

SYMPTOM	SOLUTION
Remote control illuminates and appears to be operable, but will not activate base.	<ul style="list-style-type: none"> <li>• Verify power cord is plugged into a working, grounded electrical outlet. <b>A grounded, electrical surge protection device is recommended.</b> Test outlet by plugging in another working appliance.</li> <li>• If the base was operated over the rated duty cycle, thermal switch opens. Wait 30 minutes before trying to operate the base. Once the base resumes normal operation, do not exceed the duty cycle.</li> </ul>
No features of the base will activate.	<ul style="list-style-type: none"> <li>• Program the remote control (see <i>Remote Control Programming</i> section of this manual for programming procedures).</li> <li>• Unplug power cord, wait 30 seconds and plug in to reset electronic components.</li> <li>• Electrical circuit breaker may be tripped. Check electrical service breaker box to verify.</li> <li>• Defective surge protection device or electrical outlet. Test outlet by plugging in another working appliance.</li> </ul>
Remote control will not illuminate.	<ul style="list-style-type: none"> <li>• Replace batteries in the remote control.</li> </ul>
Head or foot section will elevate, but will not return to the horizontal (flat) position.	<ul style="list-style-type: none"> <li>• Base mechanism may be obstructed. Elevate base and check for obstruction. Remove obstruction.</li> <li>• Head section may be too close to the wall.</li> <li>• Headboard (if used) may be too close the edge of the mattress. Verify a 1.5" (38.1mm) to 2" (50.8mm) distance between headboard brackets and mattress. Adjust if required.</li> </ul>
Excessive massage motor noise.	<ul style="list-style-type: none"> <li>• If base is located on hard surface flooring, place carpet pieces or rubber caster cups under each leg or caster of the base. (See accessory section of this manual for rubber caster cup order information.)</li> <li>• Elevate the head or foot section a short distance (with the remote control) to realign the lift/lower mechanisms with the base support platform.</li> <li>• Verify that the base is not positioned against a wall, nightstand, or other object that may cause vibration or noise.</li> <li>• If base is installed over a bed frame, verify massage motors are not causing bed frame (or bed frame components) to vibrate.</li> <li>• Verify that headboard attachment hardware is tightened firmly (if used).</li> </ul>



## ACCESSORIES

Contact customer service toll free (800-888-3078) to order accessories listed below.

ACCESSORY DESCRIPTION	CODE	IMAGE
Headboard Brackets-TXL	4B8808	
Headboard Brackets-FXL/Q	4B8809	
Push-in Locking Casters (set of 4)	4B1806	
Bed Link Kit (connects two bases together)	4B7410	
Swing-away Hinges (headboard required for use, cannot be used with bed straps)	4B1209	

## 1 YEAR, 3 YEAR AND 25 YEAR LIMITED WARRANTY

In this warranty: “**Adjustable base**” means the adjustable bed foundation sold by L&P to the dealer. The “adjustable base” does not include the mattress. “**L&P**” means Leggett & Platt, Incorporated. “**Purchaser**” and “**You**” both mean the consumer who is the original purchaser of this adjustable base made by L&P. This warranty is not transferrable. “**Warranty Commencement Date**” means either (i) the date You purchased a new and unused L&P adjustable base or (ii) the date of manufacture of this adjustable base if You purchased an L&P adjustable base that has been used as floor or display model. A “replacement part” is a new or used part selected at the sole discretion of the manufacturer, including a refurbished or reinspected part, provided in replacement of a part previously incorporated in the adjustable base. L&P warrants this adjustable base to You on the terms and over the reducing periods of time set out below. All warranty claims require notice from You to be given to L&P in the manner set out below, and to be received by L&P inside the applicable warranty time period.

### 1ST YEAR FULL WARRANTY

For the first year from the Warranty Commencement Date, your adjustable base is warranted against non-excluded defects in L&P’s workmanship or materials. During the first year from the Warranty Commencement Date, L&P will repair or replace (at no cost to You) any defective adjustable base part, and L&P will pay all authorized labor and transportation costs associated with the repair or replacement of any parts found to be defective.

### 2ND & 3RD YEAR LIMITED WARRANTY

During the second and third year from the Warranty Commencement Date, L&P will replace any adjustable base part found to be defective and not excluded by this warranty. You are responsible to pay all service and transportation costs related to the costs of receiving and installation of the replacement part.

### 4TH YEAR TO END OF 25TH YEAR LIMITED WARRANTY

Starting in the fourth year from the Warranty Commencement Date and through to the end of the 25th year from the Warranty Commencement Date, L&P will replace steel and mechanical base parts found to be defective and not excluded by this warranty. **This warranty does not cover any electronics, electrical components, drive motors or massage motors.** You are responsible to pay all service and transportation costs related to receiving and installation of the replacement part and a portion of the cost of the replacement steel and mechanical part, based on the number of months that the base has been owned by you since the fourth anniversary of the Warranty Commencement Date. By the end of the 25th year, no portion of the replacement cost is covered by L&P. You will be required to pay 1/22nd of the then current replacement cost of the part multiplied by the number of years past the third year from the Warranty Commencement Date. This portion is calculated using the following formula: Cost of the replacement part divided by 22 [being the number of years in years 4 to 25 inclusive], multiplied by the number of years you have owned the base since the end of the first 3 years. For example, if you make a claim for a replacement part eligible for this warranty in the 5th year since the Warranty Commencement Date, you would be responsible for paying: \$100 part cost divided by 22, multiplied by 2 = \$9.09.

### ADDITIONAL TERMS AND CONDITIONS

This warranty requires notice to be given to L&P of any claim for repairs or replacement parts.

### EXCLUSIONS:

This warranty does not apply; (a) to any damage caused by You; (b) if there has been any repair or replacement of adjustable base parts by an unauthorized person; (c) if the adjustable base has been mishandled (whether in transit or by other means), subjected to physical or electrical abuse or misuse, or otherwise operated in any manner inconsistent with the operation and maintenance procedures outlined in the Owner’s Manual and this warranty; (d) to damage to mattresses, fabric, cables, electrical cords or items supplied by dealers (contact the dealer for warranty information on these items); (e) if there has been any modification of the adjustable base **without prior written consent by L&P**; or (f) to costs for unnecessary service calls, including costs for in-home service calls solely for the purpose of educating You about the adjustable base or finding a satisfactory power connection.

This warranty will be void if either the recommended weight restriction is not followed (refer to the advisory section of the Owner’s Manual) or if You sell or give or transfer the base to another person.

Any repairs to or replacement to Your adjustable base or its components under the terms of this limited warranty does not extend the applicable warranty from the Warranty Commencement Date. This time limitation may not apply in some jurisdictions, including the Province of Quebec.

The decision to repair or to replace defective parts under this warranty shall be made, or cause to be made, by L&P at its option and in its sole discretion.

*Continued on next page...*

## **1 YEAR, 3 YEAR AND 25 YEAR LIMITED WARRANTY**

**Repair or replacement shall be the sole remedy of the Purchaser. There shall be no liability on the part of L&P for any special, indirect, incidental, or consequential damages or for any other damage, claim, or loss not expressly covered by the terms of this warranty.**

This limited warranty does not include reimbursement for inconvenience, removal, installation, setup time, loss of use, shipping, or any other costs or expenses. L&P and its service technicians will not be responsible for moving furniture or any other items not attached to the adjustable base in order to perform service on the adjustable base.

It is the sole responsibility of You to provide adequate space and accessibility to the adjustable base. In the event that the technician is unable to perform service due to lack of accessibility, the service call will be billed to You and the service will have to be rescheduled.

**L&P makes no other warranty whatever, express or implied, and all implied warranties of merchantability and fitness for a particular purpose are disclaimed by L&P and excluded from this agreement.**

Some American States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to You.

This warranty gives You specific legal rights, and You may also have other rights, which may vary from jurisdiction to jurisdiction. This warranty is valid in all 50 American States, the District of Columbia, Puerto Rico, and all 10 Provinces and 3 Territories of Canada.

For customer service under this limited warranty, give notice to L&P by mail, phone, email or online to the addresses set out below:

Leggett & Platt, Incorporated  
PO Box 668  
Lexington, North Carolina 27293

toll free phone: 1.800.888.3078  
online: [lpadjustablebases.com](http://lpadjustablebases.com)

**PLEASE DO NOT CONTACT YOUR RETAIL DEALER  
OR ANY OTHER SERVICE PERSONNEL**

**NATIONWIDE CUSTOMER SERVICE toll free: (800) 888-3078**

© 2018 Leggett & Platt Adjustable Bed Group, a division of Leggett & Platt Incorporated

